

# BROTHER TN-450 Printer Toner Reset Instructions

- **Step 1** – Turn off your Brother laser printer or multifunction center.
- **Step 2** – Open the front cover of your Brother laser printer/MFC and make sure it remains that way thorough the whole procedures.
- **Step 3** – Hold the go button while turning on your Brother laser printer/MFC. All LEDs turn on and the Ready LED will turn off.
- **Step 4** – When the Ready LED turns off, release the GO button. All LEDs will turn off.
- **Step 5** – Press the GO button 2 times (Toner, Drum, and Error LEDs turn on).
- **Step 6** – Press the GO button 7 times. All LEDs turn off and then the Error LED will turn on.
- **Step 7** - When the Error LED stays on, close the front cover. The Error LED will turn off and the Ready LED will flash briefly.
- **Step 8** – Verify the Ready LED is on steady and the Toner LED is off. Once your done, you can now resume doing your print jobs.