

Brother TN660 Toner Reset Instructions

You recently changed your toner but the machine is still popping up with “Toner Low” or “Replace Toner” message. It happens sometimes with Brother printers as when a cartridge is first installed the printer’s internal toner counter doesn’t always reset, and you may need to perform a quick toner reset for **Printers that take the TN660**:

For the Brother DCP/MFC Series Printers (DCP-L2520DW, DCP-L2540DW, MFC-L2680W, MFC-L2685DW, MFC-L2700DW, MFC-L2705DW, MFC-L2707DW):

1. Press **Menu**.
2. Press the **Up** or **Down** arrow key to display the **General Setup** option, and then press **OK**.
3. Press the **Up** or **Down** arrow key to display the **Replace Toner** option, and then press **OK**.
4. Press the **Up** or **Down** arrow key to display the **Continue** or **Stop** option, and then press **OK**.
5. Press **Stop/Exit**.

For the Brother HL Series Printers (HL-L2300D, HL-L2305W, HL-L2315DW, HL-L2320D, HL-L2340DW, HL-L2360DW, HL-L2380DW):

1. Open front cover and leave it open.
2. Turn off printer.
3. Hold **GO** button while turning printer on.
4. After 3 seconds of printer being back on, release both buttons. (If you have a readout “User Mode” will appear, if you have no readout don’t worry)
5. Press **Go** button **9 times**.
6. WiFi LED (if you have one) will flash once. (If you have no readout, go to next step.)
7. Press **Go** button **5 times**.
8. Close the cover.

For the Brother MFC Laser Printers (MFC-L2720DW, MFC-L2740DW):

1. Open the front cover of your **Brother MFC laser printer** where you can access its toner cartridge.

2. Press and hold the **Hash (#) button** for about 5 seconds to see the toner menu on the screen. (The # key will be blacked out. If you are unsure where it is located press **fax** to find then press **clear** to perform the reset from your **menu**)
3. Select the toner you need to reset (For the **TN630 choose STD** for **TN660 choose HC**)
4. Select YES to reset.
5. Close the front cover.
6. DONE.